 
 
 
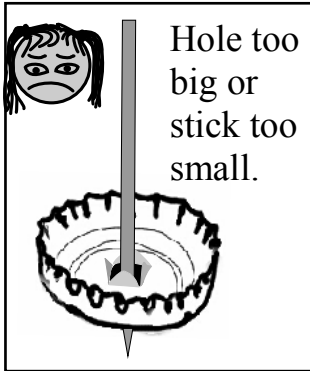 
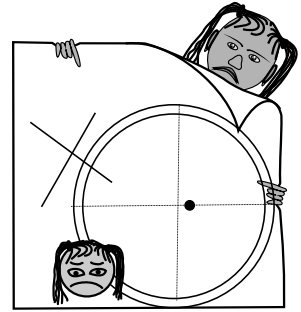 


Spinning Top

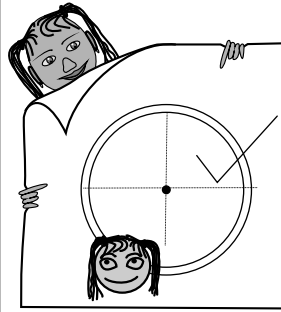

Flattened tops work best

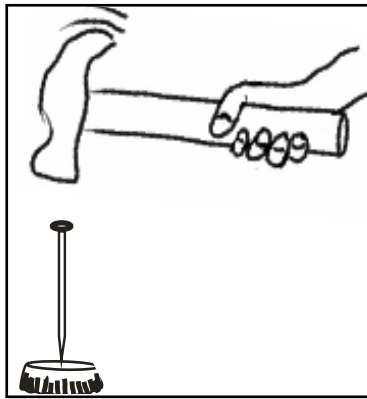


Hole too big or stick too small.




Push flaps back in





90°

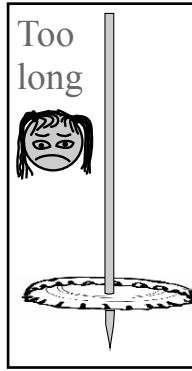

Too long

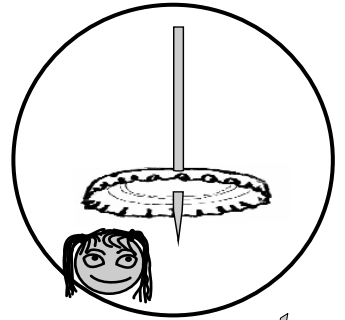


Stick must be tight to lid, 90°, sharp and short.

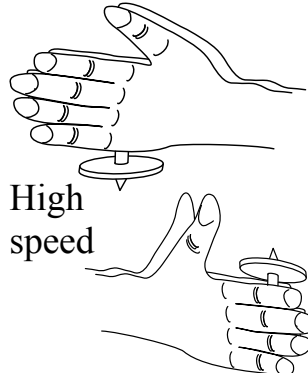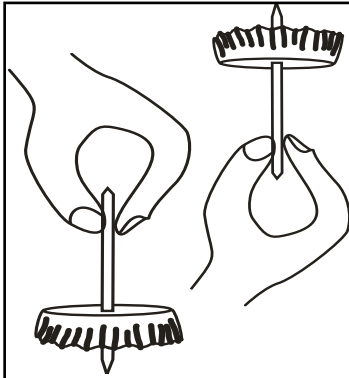


High speed

Shooting



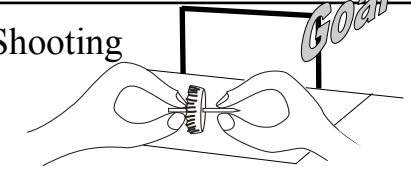


Goal





Catching

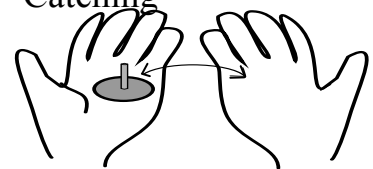

Dice

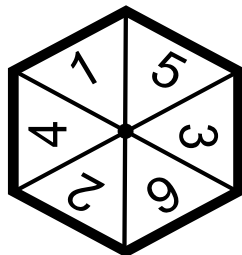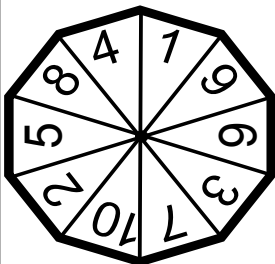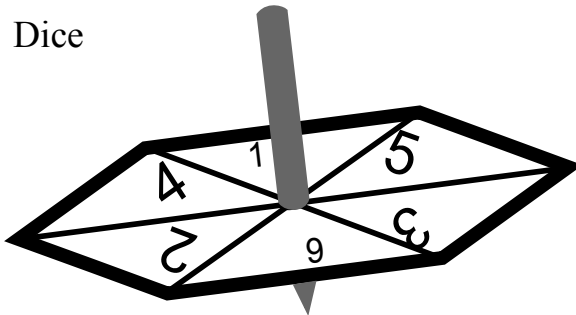

More tops

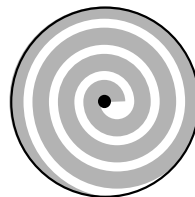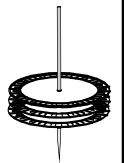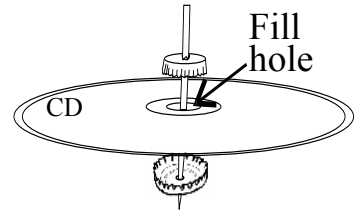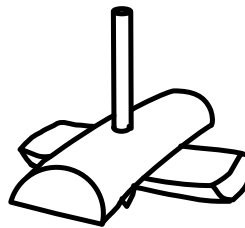

Painted cardboard

